

## Memory Craft 9000/1000 Stitch Chart

9000	10000
1	1
2	2
3	3
4	4
5	5
6	6
7	73
8	8
9	9
10	10
11	17
12	19
13	21
14	24
15	25
16	18
17	28
18	29
19	30
20	7
21	11
22	12
23	13
24	14
25	15
26	84
27	86
28	94
29	91
30	16
31	106
32	105
33	93
34	102
35	96
36	97
37	98
38	99
39	100
40	95
41	39
42	38
43	48
44	50

9000	10000
45	37
46	36
47	49
48	32
49	33
50	LS
51	51
52	53
53	54
54	46
55	44
56	52
57	46
58	43
59	55
60	LS
61	179
62	149
63	146
64	137
65	151
66	NA
67	NA
68	NA
69	NA
70	LS
71	NA
72	NA
73	NA
74	NA
75	NA
76	NA
77	NA
78	NA
79	NA
80	LS
81	201
82	207
83	208
84	209
85	96
86	210
87	211
88	212

9000	10000
89	213
90	LS
91	180
92	181
93	170
94	108
95	104
96	183
97	169
98	185
99	106
100	107
101	186
102	187
103	188
104	189
105	190
106	191
107	192
108	193
109	194
110	195
111	169
112	166
113	124
114	196
115	197
116	198
117	199
118	135
119	132
120	200
121	110
122	11
123	73
124	117
125	118
126	114
127	111
128	116
129	31
130	LS
131	164
132	171

9000	10000
133	172
134	173
135	174
136	163
137	176
138	177
139	175
140	SPACE
141	165
142	113
143	154
144	155
145	148
146	91
147	115
148	92
149	85
150	90

LS = Lock Stitch

NA = Not Available

## Craft Patterns

	41	
	42	
	43	
	44	
	45	
	46	
	47	
	48	
	49	
	51	
	52	
	53	
	54	
	55	
	56	
	57	
	58	
	59	
	61	
	62	
	63	
	64	
	65	
	66	
	67	
	68	
	69	
	81	
	82	
	83	
	84	
	85	
	86	
	87	
	88	
	89	
	91	
	92	
	93	
	94	
	95	
	96	
	97	
	98	
	99	
	100	
	101	
	102	
	103	
	104	
	105	
	106	
	107	
	108	
	109	
	110	
	111	
	112	
	113	
	114	
	115	
	116	
	117	
	118	
	119	
	120	
	121	
	122	
	123	
	124	
	125	
	126	
	127	
	128	
	129	
	131	
	132	
	133	
	134	
	135	
	136	
	137	
	138	
	139	
	141	
	142	
	143	
	144	
	145	
	146	
	147	
	148	
	149	
	150	



- All patterns on the chart (except the "one point patterns," right) indicate the unit of each pattern sewn when the **M** key is pressed once.
- \* Each pattern includes the locking stitch at the starting point. For locking at the end point, press the auto-lock button while sewing.
- \* Each pattern starts at the "○" indication.